

Onan

RV GenSet

Standard Repair Times

KY and KYD



Printed in U.S.A. 5-2004

900-0606C

Table of Contents

Contents	Page
Foreword	v
General Information	vi
Types of Standard Repair Times	vi
Administrative SRT	vi
Troubleshooting SRT	vi
Repair SRT	vii
Standard Repair Combined Times	vii
SRT Coding System	viii
Group Numbers	viii
Procedure Numbers	viii
Step Numbers	ix
Manual Organization	ix
Cummins/Onan SRT Objectives and Philosophy	ix
How Standard Repair Times are Developed	x
Productive Repair Time	x
Time Allowances	xi
Work Not Included in an SRT	xi
Non-Productive Work	xii
Service Accessibility Codes	xii
“A” Accessibility Rating	xiii
“B” Accessibility Rating	xiii
“C” Accessibility Rating	xiii
“D” Accessibility Rating	xiii
Standard Repair Combined Times (SRCT)	xiii
How To Use This Manual	xiv
Standard Repair Times Review Procedure	xvi
Company Action	xvi
Group 00 – Complete Engine	1
Administrative Time	2
Engine	2
Generator Set, Mobile	4
Troubleshoot	4

Group 01 – Cylinder Block	13
Balancer Shaft and Gear	14
Camshaft	14
Connecting Rod	15
Crankshaft	16
Crankshaft Seal, Rear	17
Cylinder Block	17
Gear Case Cover	18
Gear Cover Gasket	18
Gear, Camshaft	19
Gear, Crankshaft	20
Governor, Mechanical	20
Piston Assembly	21
Piston Rings	21
Group 02 – Cylinder Head	23
Cylinder Head	24
Cylinder Head Gasket	24
Valves	25
Group 03 – Rocker Levers	27
Breather Valve	28
Valves	28
Group 04 – Cam Follower	29
Valve Tappets	30
Group 05 – Fuel System	31
Carburetor	32
Choke, Bi-Metal	33
Choke, Carburetor	33
Fuel Pump, Electric	34
Governor, Mechanical	34
Fuel Shutoff Valve (Gasoline)	35
LP Fuel Supply Valve	35
LP Primer Solenoid Assembly	35
LP Regulator Assembly	36
Group 07 – Lubricating Oil System	37
Oil Base	38
Oil Base Gasket	38

Group 10 – Intake Air System	39
Air Cleaner Element	40
Intake Manifold	40
Intake Manifold Gasket	40
Group 11 – Exhaust System	41
Exhaust Manifold	42
Exhaust Manifold Gaskets	42
Group 13 – Electrical Equipment	43
Ignition Coil	44
Magneto, Ignition	44
Magneto, Ignition and Spark Plug Wire	45
Spark Plug	45
Spark Plug Terminal & Boot	45
Starter Motor	46
Group 16 – Mounting Adaptations	47
Flywheel	48
Air Housing Assembly	48
Group 17 – Miscellaneous	49
Drip Pan	50
Exhaust Tube	50
Muffler	50
Group 25 – Generator	53
Brush Block and Brushes	54
Main Rotor	54
Main Stator	55
Rotor Bearing	55
Group 26 – Generator Control	57
AC Circuit Breaker	58
AC Voltage Regulator	58
Fuse Holder	58
PCB Control Board	59
Relay, Start Disconnect (K2)	59
Resistor, Charging	59
Start Solenoid	60
Stop Solenoid	60
Voltage Transformer	60
DC Wiring Harness	61
AC Wiring Harness	61
Index	63

Request for SRT Review

Foreword

The Standard Repair Times (SRT) in this manual represent the time required to perform service repairs on Onan Engine and Generator Sets. These times are representative of an average mechanic in a typical dealer or distributorship using the prescribed hand tools, equipment, and all available service tools and equipment required to perform quality repairs and do all necessary testing.

The use of this manual will:

- Encourage uniform terminology throughout the Cummins/Onan organization
- Standardize Repair Order job description write-ups
- Provide shop managers with a guide for establishing flat rate quotations
- Serve as a basis for Onan Corporation, Inc. to establish its warranty labor obligations

Reporting of errors, omissions, and recommendations for improving this publication is encouraged. Send your suggestions or comments to:

Onan Corporation

1400 73rd Avenue NE
Minneapolis, MN 55432

Attn: Service Department

GENERAL INFORMATION

Standard Repair Times (SRT) are lists of work tasks (procedures) and the time required to perform those tasks. The procedures list the work tasks required to be sure an engine or generator set is ready to return to service at the lowest possible cost to the customer. A Standard Repair Time is equitable when the repair described in the procedure can be performed in a period of time less than or equal to the standard by a journeyman mechanic after he/she has performed that repair on the same model, in the same application at least once. Those SRT that a particular mechanic performs more frequently will often require less time than the standard. Conversely, those SRT that a particular mechanic does not frequently perform may require more time than the standard. Several of the procedures may be required to accurately depict all the work actually performed to return a particular engine or generator set to service because the repair of a particular engine or generator set is often unique in light of the complaint, failure model, progressive damage, condition of the parts and customer desires. To allow for differences in the time required to perform a repair because of interference by the application, a Service Accessibility Code Scheme has been created.

Types of Standard Repair Times

There are three types of SRT. Most often at least one of each type is necessary to accurately depict the repair. The three types are:

- Administrative
- Troubleshooting
- Repair

Administrative SRT

Administrative SRT are intended to provide time to move the vehicle engine or generator set to and from the work area, fill out the repair order, record SRT used, etc. It is intended that an administrative SRT be used only once for each repair order. There are two administrative SRT found in this manual in Group 00 – Complete Engine. One of the administrative SRT is to be used when the repair takes place in a shop operated by the repairing location. The other administrative SRT is to be used when the repair takes place away from the shop operated by the repairing location (road repairs). The time for the road repair administrative SRT is greater to allow for loading and unloading tools, equipment, parts, etc. from the service truck.

Troubleshooting SRT

Troubleshooting SRT are found only in Group 00 – Complete Engine. These SRT are intended to be used when diagnosing and analyzing engine, generator set or component failures. Troubleshooting SRT are broken down in to logical numbered steps. The time for each step is cumulative with successive steps, including the time for the appropriate preceding step(s). Some troubleshooting SRT contain time to remove and install components to perform the check(s) listed. Most do not. If a troubleshooting SRT does **NOT** include required component removal and installation, it is intended that the SRT for the removal and installation of that component be in addition to the troubleshooting SRT. Refer to the following example:

Procedure Number	Procedure Description	SRT Hours
00-055	Troubleshoot – Lubricating Oil Consumption Excessive Includes:	
-01	- Check: – Oil consumption report – For external oil leaks – For overfilled oil pan – Oil specifications – For fuel contamination – Oil change interval – For engine oil in torque converter	0.4
-02	- Perform checks in Step 01 – Check: – Oil temperature – Air compressor oil consumption – Turbocharger seal – Crankcase blowby	1.0

In the above example, the time required to perform the checks in Step 01 is 0.4 hour. If the problem is not located while performing the checks in Step 01, an additional 0.6 hour is allowed to perform the checks in Step 02 for a total of 1.0 hour. The total troubleshooting time appropriate is the time indicated in the column directly in line with the final step required to locate the problem. The step required to locate the problem may or may not be the last step shown in the troubleshooting SRT. Each step contains information as to which steps are included.

Repair SRT

Repair SRT make up the majority of this manual. These are the SRT that cover the actual repair work. The time shown on the same line as the SRT code and title is the total time for that SRT.

Standard Repair Combined Times

Standard Repair Combined Times (SRCT) provide for the combining of the three types of SRT under one code so that, if appropriate, the user can identify the work performed with fewer SRT codes.

SRT CODING SYSTEM

Each SRT has a unique code so that SRT data can be computerized. The numbering system used is common to all the SRT manuals for all Onan engines and generator sets. The portion of the system shown in the manual contains three segments:

- Group Number
- Procedure Number
- Step Number

Group Numbers

Group numbers (the first two digits in the SRT code) are used to identify major engine components. The sample list below explains the group numbers used in SRT charts.

Procedure Numbers

The procedure number consists of three digits. The first digit provides guidance as to the category of the repair. The second and third digits, shown as XX in the following list, are sequential numbers or alpha letters within the category.

Group Number	Contents of Group	Specific Repair Number	Description of Category
00	Complete Engine or Genset		
01	Cylinder Block	0XX	Troubleshooting
02	Cylinder Head		ONLY in Group 00
03	Rocker Levers	1XX	Remove and Install
04	Cam Followers/Tappets	2XX	Rebuild
05	Fuel System	3XX	Replace
06	Injectors and Fuel Lines	4XX	Clean and Visually Check or Inspect for Reuse
07	Lubricating Oil System		
08	Cooling System	5XX	Machine/Ream/Dowel/Sleeve
09	Drive Units		
10	Intake Air System		Modify/Cut/Lap
11	Exhaust System	6XX	Adjust/Calibrate
12	Air (Compressed) System		
13	Electrical Equipment	7XX	Test
14	Engine or Generator Set Testing		
15	Instruments and Controls		
16	Mounting Adaptations		

Group Number	Contents of Group	Specific Repair Number	Description of Category
17	Miscellaneous	9XX	(SRCT in Group 99) General/Miscellaneous
22	Hardware		
25	Generator Components		
26	Generator Control Components		
27	Transfer Switches		
99	SRCT		

Step Numbers

While all SRT codes will contain a Group and Procedure number, only those procedures that are broken down into steps have step numbers. The step numbers are sequential within a SRT.

Manual Organization

There is an alphabetic index in the back of the manual. Within a particular group the procedures are arranged in alphabetical order by title, thus are not in code numeric order.

There is also a numerical index in which the procedures are arranged in numeric order and not in alphabetical order.

Within a procedure, the user will note that some lines are indented. This indentation is intended to indicate that the sub-tasks are part of the task under which they are indented.

Cummins/Onan SRT Objectives and Philosophy

The objective of Cummins/Onan SRT program is to provide credible and equitable labor time standards and procedures to the worldwide Cummins/Onan service network.

A SRT is credible when the procedure accurately depicts the work that **must** be performed to accomplish a quality engine or generator set repair.

A SRT is equitable when it can be performed in a period of time less than or equal to the standard by a journeyman mechanic after he/she has performed that repair at least once.

To establish credible and equitable SRT with sufficient flexibility to account for differences in complaints, failures, progressive damage, customer desires, etc., SRT have been structured using the following considerations:

- What must ALWAYS be done to the engine or generator set to perform the work.
- What MAY have to be done to the engine or generator set parts dependent on their condition.
- What MAY have to be removed to access the engine or generator set.
- How difficult it is for the mechanic to reach the engine or generator set even after the interfering application hardware has been removed.

While the most frequent use of SRT information is the Onan Warranty System, it is Onan's intent that the SRT be applicable to repairs conducted for any customer.

As SRT's are developed, it is assumed:

- That all the required tools, equipment, and supplies are available in sufficient quantity and in operating condition.
- That required Onan Service Manuals are available to the mechanic are being used.
- That the correct parts are available when the mechanic needs them.

How Standard Repair Times are Developed

SRT's are developed from time studies conducted in the field and Onan Technical Service Personnel. Technical Service Representatives create a comprehensive list of all the work elements or tasks required to perform specific repairs. Field studies are analyzed to find these same work elements or tasks and determine the time required for each. The time for work elements or tasks that are not included in the field time studies is determined by conducting free engine or generator set studies or by estimation using similar elements from existing time studies. A time is determined for each element of the procedure. The time for all elements is then totaled to establish the total productive repair time.

Productive Repair Time

Productive Repair Time is described as the actual time involved doing productive work, such as: removing, disassembling, cleaning, inspecting, machining, installing and adjusting parts or components. In addition, the following operations are considered to be productive work for inclusion in a SRT:

- Clock on and off the job or repair order, including shift changes.
- Move vehicle, engine or generator set to and from the work area.
- Move tool box to the work area.
- Obtain tools from tool box, wipe and put away after use.
- Refer to service manuals.
- Obtain, unpack and clean replacement parts as necessary.
- Package and mark parts removed as necessary for warranty or local consumer laws.
- Operate engine or generator set to check for proper operation.
- Clean work area at completion of shift or repair.
- Properly dispose of used engine fluids such as oil and coolant.
- Write summary of work performed at completion of repair or work shift.
- Help from another mechanic (time for one man to complete the task times two).

Time Allowances

After the total productive time is established, an additional allowance of 15 percent is added to cover the following:

- Personal time of 5 percent for:
 - Scheduled rest breaks
 - Personal phone calls
 - Restroom breaks
 - Shift changes
- Supplementary time of 10 percent to cover normal work interruptions:
 - Seized or hard turning fasteners
 - Extra time for extremely dirty equipment
 - Excessive waiting time for replacement parts
 - Brief assistance to other mechanics (less than 5 minutes)
 - Routine maintenance (not repair) of shop equipment
 - Obtain consumable supplies
 - Technical consultation with shop supervision

The following is an example of how the allowances are calculated to establish the SRT for a procedure where the productive time is 208.7 minute (3.48 hr):

Allowance Type	Allowance Percent (%)	Time (Minutes)
Productive Repair Time	100	208.7
Personal	5	10.4
Supplementary	10	20.9
TOTAL	115	240.0

Published Standard Repair Time = 4.0 hours

Work Not Included in an SRT

For almost every complete repair there will be one SRT that contains most of the work performed. This is sometimes called a base repair. For example, repairing an engine for high oil consumption often requires use of the SRT title Piston and Rings – Remove and Install. This SRT contains most of the time appropriate for the repair, so it is the base repair. There can be work required that is **not** part of this base SRT. This does not mean that the other work is non-productive, rather that other work is **NOT** required EVERY TIME the pistons and rings are removed and installed. More often than not, this other work is covered by another SRT. If the other work is **not** included in the base repair or in another SRT, the work is probably still productive work required for that particular repair.

Non-Productive Work

Analysis of past SRT time studies reveals the following general types of work that were not considered to be productive:

- Waiting on camshaft gears to heat and cool
- Waiting on another mechanic to finish using special tools or shop equipment
- Hunting for misplaced parts
- Repairing shop equipment
- Sorting through capscrews, to find the correct length, that were all thrown together into one basket during disassembly
- Repairing customer supplied components
- Salvaging parts or tools that have been damaged from improper handling or lack of correct tools
- Clearing off tables, parts carts, parts racks etc. left dirty or loaded with parts from previous repairs on other equipment
- Rework caused by installation of incorrect parts or incorrect installation of correct parts
- Fabrication or modification of special tools or equipment because the correct tools or equipment are not available
- Visiting during non-break time
- Conducting business with tool vendors
- Waiting on other mechanics to provide required help
- Waiting on parts clerk to fill orders for other mechanics
- Unnecessary inspection of new parts
- “Hot Setting” valves and injectors when not required
- Repairs to application hardware
- Rework resulting from failure to follow recommended service practices
- Performing work that is **not** part of the repair order or helping another mechanic

Service Accessibility Codes

Service repairs are affected by engine or generator set accessibility. The more difficult the accessibility, the longer it will take to complete the tasks given in the SRT procedure. Accessibility for a particular application is determined by reviewing the application and rating the degree of difficulty for performing the 20 most common repairs. Four codes (A, B, C and D) are used to classify the degree of difficulty for the service accessibility of a specific model or type of equipment. An “A” accessibility code indicates the engine or generator set is easily accessible. A “D” code indicates the application does not make the engine or generator set as easily accessible, thus the highest degree of difficulty relative to SRT standards. A “S” code is included for special or specific repairs not covered in the other four classifications. The “R” code indicates the repair is completed with the component, engine or generator set removed from the application.

“A” Accessibility Rating

1. Engine or generator sets mounted in equipment where 90 percent of the work can be performed while standing on the ground, shop floor, or flat work deck.
2. Engine or generator set can be accessed without removing any doors or panels.
3. Interfering application hardware can all be removed.
4. Clearance is sufficient for hands, wrenches, and drain and fill operations, making visual checks and room to stand and work.

“B” Accessibility Rating

1. Engine or generator set mounted in equipment where 70 percent of the work can be performed while standing on the ground, shop floor or flat work deck.
2. Access to the engine can be gained by removing access panels or doors.
3. On 80 percent of the operations, interfering application hardware can be removed.
4. On 80 percent of the operations, clearance is sufficient for hands, wrenches, service tools, drain and fill operations, making visual checks and room to stand and work.

“C” Accessibility Rating

1. Engine or generator set mounted in equipment where 50 percent of the work can be performed while standing on the ground, shop floor or flat work deck.
2. Access to the engine or generator set can be gained by removing the hood, structural members (bolted in) or sheet metal panels.
3. On 60 percent of the operations, interfering application hardware can be removed.
4. On 60 percent of the operations, clearance is sufficient for hands, wrenches, service tools, drain and fill operations, making visual checks and room to stand and work.

“D” Accessibility Rating

1. Engine or generator set mounted in equipment where 25 percent of the work can be performed while standing on the ground, shop floor or flat work deck.
2. Access to the engine or generator set is limited due to interference from permanently mounted structural members, sheet metal or crossmembers.
3. On 40 percent of the operations, clearance is sufficient for hands, wrenches, service tools, drain and fill operations, making visual checks and limited room to stand and work.

Standard Repair Combined Times (SRCT)

SRCT's are the combination of some of the SRT's in the manual within a distinctive code. These SRCT's are based on field input of SRT that are most frequently used in combination to describe the most common field repairs on this engine.

Use of SRCT's can reduce the amount of time required to determine the labor standard for a specific complete engine or generator set repair. The use of SRCT will also reduce the number of codes required when completing a warranty claim or customer invoice.

SRCT's are intended to supplement, NOT replace, SRT. One SRCT code can be used instead of several SRT codes.

It is intended that other appropriate SRT can be used to supplement a SRCT as long as the work does not overlap. If there is overlapping work, do **not** use a SRCT.

How To Use This Manual

1. Determine the actual work performed:

- Obtain this information from the work description on the repair order.

2. Determine the Accessibility Code:

- Determine the application from the repair order.
- Look in the “Accessibility Code Listing” on page to determine the accessibility code for the application involved in the repair. If the application is not shown, assume the accessibility code is “B”.
- Write down the code.

3. Determine applicable SRCT:

- Find the Contents Page for Group 99 – Standard Repair Combined Times.
- Compare the titles to the work performed to determine if a SRCT will apply.
- If there is a SRCT that seems to apply, find that SRCT and compare the SRT within the SRCT to the work performed. If you are not sure of the work included in the SRT, read that SRT and compare the procedure listing with the work performed.
- If a SRCT applies to all or part of the work performed, find the column that contains the same accessibility code determined in Step 2 above.
- Move down the column to the line containing the SRCT code and title and pick out the appropriate time.
- If all the work in the SRCT is performed and additional steps were taken, use the SRCT and continue to Step 4 to cover the additional work.
- If there is NOT an appropriate SRCT, move to Step 4.

4. Determine the appropriate repair SRT:

- Use the information from the repair order to identify the parts involved.
- Use the contents page at the front of the manual or the alphabetical index in the back of the manual to determine the appropriate SRT group for the parts and/or work involved.
- Find the contents page for that group.
- Read the contents page for procedure titles that seem to correspond to the work performed.
- Find the SRT within the group.
- Read the SRT procedure listing to determine the work included.

- If the work performed and the work included in the SRT are the same, all or in part, determine and record the time.
- Repeat the steps in this paragraph until you have determined a SRT for all the work performed.

5. Determine the appropriate troubleshooting SRT:

- Read the repair order to determine what troubleshooting work was performed.
- Find the contents page for Group 00.
- Read the contents page for procedure to determine the work included in each step.
- If the work performed and the work included in the troubleshooting SRT are the same, all or in part, determine and record the time of the SRT step. Remember that troubleshooting SRT are cumulative.

6. Determine the appropriate miscellaneous SRT:

- Read the repair order to determine if any application hardware was removed and installed in order to access the engine or generator set.
- Find the contents page for Group 17.
- Read the contents page for procedure titles that seem to correspond to the work performed.
- Find the SRT within the group.
- Read the SRT procedure to determine the work included in the SRT.
- If the work performed and the work included in the SRT are the same, all or in part, determine and record the time.
- If the work required to application hardware is not given in the SRT manual, determine the time for ONLY this work from the repair order. Record the time for possible use as “99–999” or “Non–SRT Time”.

7. Determine the appropriate administrative SRT:

- Both of the administrative SRT are shown at the beginning of Group 00.
- Determine the appropriate SRT.
- Record the time.

8. Determine the total appropriate SRT time:

- Check to be sure that there is no duplication of tasks within the SRT procedures selected. If there is work duplicated by some of those selected, use other information contained in the manual to reduce the time of one of the SRT accordingly. If the information is not available, make an estimate.
- Total all the times obtained during performance of Steps 2 through 7.

Standard Repair Times Review Procedure

Onan Corporation makes every effort to be sure the SRT published in this manual are credible and equitable. It will be necessary to review the published times when one or more of the following changes occur:

- Design changes to special service tools or equipment required to perform the repair
- Changes to the repair procedure

A formal SRT review procedure is available for any Cummins/Onan Authorized Repair Location that believes the SRT shown in this manual are incorrect.

To be sure prompt attention and an accurate appraisal is given to your request, the following guidelines must be met:

1. Be sure the technician has followed all the procedures and used all the service tools referred to in the appropriate service manuals.
2. Be sure a journeyman technician performed the repair, one who has completed the repair a sufficient number of times to become familiar with the procedure.
3. Be sure all the SRT, including supplemental SRT, appropriate for the repair are being used.
4. Include as much detail as possible about the specific repair.

NOTE: It is **NOT** the intent of this procedure to provide a forum for appealing or disputing the amount of time or the SRT judged appropriate on a particular warranty claim. Communication of this sort **must** follow the processes shown in the Onan Warranty Administration Manual.

5. Provide photographs of the installation.
6. Provide copies of all repair orders applicable to the SRT involved, the technicians time cards, and any other information related to the repair that will aid in the review process.
7. Be sure to provide the correct name of the repairing location, a phone number, and point of contact.

Company Action

Upon receipt of the request for an SRT review, the following action will be taken:

1. The person signing the request will be contacted to acknowledge the receipt of the request.
2. All the information provided will be analyzed and compared with the history files of the specific operation.
3. All information will be analyzed to determine if an error has been made in the procedure, the operations description, or the published repair time.
4. If it is determined the published repair time is incorrect, additional studies/analysis will be performed to establish the correct time. The requester will be notified of the results, and the results will be published in the next SRT update.
5. If it is determined that the time and procedure is correct, recommendations and assistance will be offered as needed.

Group 00 – Complete Engine

Contents	Page
Administrative Time	2
Open/Close Repair Order (Shop)	2
Engine	2
Remove and Install	2
Rebuild (Gas Engine)	3
Generator Set, Mobile	4
Remove and Install	4
Troubleshoot	4
Engine Cranks But Will Not Start	4
Engine Oil Leak	4
Engine Overfueling (Genset)	5
Engine Starts but Stops when Switch is Released	5
Engine Unstable (Hunts) (Genset)	6
Engine Will Not Crank (Genset)	6
High/Low AC Output (Genset)	7
No AC Output (Genset)	7
Fault Code 12 (Over Voltage)	8
Fault Code 13 (Under Voltage)	8
Fault Code 14 (Over Frequency)	8
Fault Code 15 (Under Frequency)	8
Fault Code 27 (Loss of AC Sense)	8
Fault Code 29 (High Battery Voltage)	9
Fault Code 32 (Starter Fault)	9
Fault Code 35 (Checksum Fault)	9
Fault Code 36 (Engine Stopped)	10
Fault Code 38 (Field Overload)	10
Fault Code 42 (Processor Fault – ROM)	10
Fault Code 43 (Processor Fault – RAM)	10
Fault Code 45 (Zero Cross Sense Loss)	10
Fault Code 46 (Overcrank)	11
Fault Code 48 (Loss of Field Sense)	11

Standard Repair Times		Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description		R	A	B	C	D	<u>Special</u> S
00-901	Administrative Time – Open/Close Repair Order (Shop) <i>Includes:</i> <ul style="list-style-type: none"> – Clock on and off the job – Move equipment to and from work area – Clean work area and write repair at the end of each shift and when job has been completed – Record the following <ul style="list-style-type: none"> – Generator Set model number – Generator Set serial number – Customer name and address – Original date of purchase – Hours of operation 	0.4	–	–	–	–	–
00-101	Engine – Remove and Install <i>Includes:</i> <ul style="list-style-type: none"> – Disconnect and connect – Wiring harness – Choke/governor linkage – Fuel lines – Drain and refill engine fluids – Remove and install <ul style="list-style-type: none"> – Mounting tray and mounts – Housings and baffles – Control and start solenoid assembly – Air cleaner – Air duct assembly – Flywheel – End bell assembly and starter – Generator end and generator adapter – Exhaust manifold and gaskets – Intake manifold, gaskets and carb assembly – Engine block – Test run genset 	–	–	4.5	–	–	–

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
00-203 Engine – Rebuild (Gas Engine) <i>Includes:</i> <ul style="list-style-type: none"> – Disconnect and connect – Choke cable – Governor linkage – Electrical wiring – Remove and install – Housings and baffles – Muffler – Generator end – Air cleaner assembly – Carburetor – Air deflector – Starter – Intake manifold – Exhaust manifold – Spark plug – Rocker cover – Cylinder head – Oil base – Balance shaft assembly – Gearcase cover – Connecting rod and piston – Crankshaft – Camshaft – Tappets – Bearings – Oil seals – Hone or bore cylinder – Test run engine 	–	–	8.5	–	–	–

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
00-1AA Generator Set, Mobile – Remove and Install <i>Includes:</i> <ul style="list-style-type: none"> – Disconnect and connect – Battery cables – Main leads and associated wiring – Fuel lines – Exhaust systems – Remove and install – Generator set from mounting location – Test run for proper operation 	–	–	1.0	–	–	–
00-022 Troubleshoot – Engine Cranks But Will Not Start <i>Includes:</i> <ul style="list-style-type: none"> –01 – Check <ul style="list-style-type: none"> – Battery condition – Fuel supply – Ignition spark – Spark plug –02 – Perform checks in step 01 <ul style="list-style-type: none"> – Check <ul style="list-style-type: none"> – Fuel supply fittings – Fuel pump – Carburetor choke – Magneto wiring – Control 	–	–	0.3	–	–	–
00-0CM Troubleshoot – Engine Oil Leak <i>Includes:</i> <ul style="list-style-type: none"> – Clean contaminated area – Add dye to oil – Run engine and check for leaks 	–	–	0.5	–	–	–

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
00-0AC Troubleshoot – Engine Overfueling (Genset) <i>Includes:</i> -01 – Check – Spark plug – Fuel pressure at carburetor – Vacuum pull-off (if equipped) – Choke heater -02 – Perform checks in step 01 – Check – Governor adjustments – Carburetor adjustments -03 – Perform checks in step 02 – Check – Ignition coil – Magneto – Timing						
00-0AB Troubleshoot – Engine Starts but Stops when Switch is Released <i>Includes:</i> -01 – Check – Fuel level – AC output when running – Remote Start/Stop switch – Start/Stop switch operation -02 – Perform checks in step 01 – Check – Control – Evaluate fault codes if present						

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
00-041 Troubleshoot – Engine Unstable (Hunts) (Genset) <i>Includes:</i> -01 – Check – Fuel supply – Fuel lines for leakage – Loose wiring connections -02 – Perform checks in step 01 – Check – Governor linkage for binding – Governor adjustments – Carburetor adjustments						
00-0AA Troubleshoot – Engine Will Not Crank (Genset) <i>Includes:</i> -01 – Check – Battery condition – Battery connections – loose or dirty – Battery cable size – Evaluate fault codes -02 – Perform checks in step 01 – Check – Starter – Start/Stop switch – Remote connections – Start solenoid – Control – Connections at control						

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
00-0AD Troubleshoot – High/Low AC Output (Genset) <i>Includes:</i> -01 – Check – Broken or loose wires – Output lead wiring configuration – Control connections at control – Evaluate fault codes if present -02 – Perform checks in step 01 – Check – Main rotor slip rings and brushes – Main stator			0.3	–	–	–
00-0AG Troubleshoot – No AC Output (Genset) <i>Includes:</i> -01 – Check – Load breakers closed – Broken or loose wires – Output to load breakers – AC output – Evaluate fault codes if present -02 – Perform checks in step 01 – Check – Field Flash – Control – Output from AVR to brushes -03 – Perform checks in step 02 – Check – Rotor winding resistance – Rotor winding grounded – Stator winding resistance			0.3	–	–	–
			0.5	–	–	–
			1.0	–	–	–

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
		R	A	B	C	D
00-0BD Troubleshoot – Fault Code 12 (Over Voltage) <i>Includes:</i> <ul style="list-style-type: none"> – Check – Output voltage – Control 	–	–	0.3	–	–	–
00-0BE Troubleshoot – Fault Code 13 (Under Voltage) <i>Includes:</i> <ul style="list-style-type: none"> – Check – Loads – Rotor and brushes – Stator – Control 	–	–	0.3	–	–	–
00-0BF Troubleshoot – Fault Code 14 (Over Frequency) <i>Includes:</i> <ul style="list-style-type: none"> – Check – Engine speed – Loads – Control 	–	–	0.3	–	–	–
00-0BG Troubleshoot – Fault Code 15 (Under Frequency) <i>Includes:</i> <ul style="list-style-type: none"> – Check – Engine speed – Control 	–	–	0.3	–	–	–
00-0BU Troubleshoot – Fault Code 27 (Loss of AC Sense) <i>Includes:</i> <ul style="list-style-type: none"> – Check – Wiring from generator to control – Generator stator – Generator rotor <p><i>(continued on next page)</i></p>	–	–	0.5	–	–	–

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
00-0BU Troubleshoot – Fault Code 27 (Loss of AC Sense) – Control – External shorts	–	–	0.5	–	–	–
00-0BR Troubleshoot – Fault Code 29 (High Battery Voltage) <i>Includes:</i> – Check – Battery connections – Battery charge rate – Battery condition	–	–	0.3	–	–	–
00-0BV Troubleshoot – Fault Code 32 (Starter Fault) <i>Includes:</i> –01 – Check – Battery voltage – Battery condition – Battery connections – Starter – External loads	–	–	0.5	–	–	–
–02 – Perform checks in step 01 – Check – Field Flash – Quad Windings – Control	–	–	1.0	–	–	–
00-0CA Troubleshoot – Fault Code 35 (Checksum Fault) <i>Includes:</i> – Check – Control	–	–	0.2	–	–	–

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
		R	A	B	C	D
00-0BW Troubleshoot – Fault Code 36 (Engine Stopped) <i>Includes:</i> <ul style="list-style-type: none"> – Check – Fuel level – Governor operation – Spark – Loads – Control 	–	–	0.5	–	–	–
00-0BX Troubleshoot – Fault Code 38 (Field Overload) <i>Includes:</i> <ul style="list-style-type: none"> – Check – Intake/Exhaust restrictions – Control – Rotor and brushes – Power factor of coach loads 	–	–	0.5	–	–	–
00-0CB Troubleshoot – Fault Code 42 (Processor Fault – ROM) <i>Includes:</i> <ul style="list-style-type: none"> – Check – Control 	–	–	0.2	–	–	–
00-0CC Troubleshoot – Fault Code 43 (Processor Fault – RAM) <i>Includes:</i> <ul style="list-style-type: none"> – Check – Control 	–	–	0.2	–	–	–
00-0BY Troubleshoot – Fault Code 45 (Zero Cross Sense Loss) <i>Includes:</i> <ul style="list-style-type: none"> – Check – Field flash – Quad winding <p><i>(continued on next page)</i></p>	–	–	0.8	–	–	–

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
00-0BY Troubleshoot – Fault Code 45 (Zero Cross Sense Loss) – Quad wiring – Rotor and brushes – Control	–	–	0.8	–	–	–
00-0BZ Troubleshoot – Fault Code 46 (Overcrank) <i>Includes:</i> – Check – Fuel level/supply – Spark – Battery level – Control	–	–	0.5	–	–	–
00-0CD Troubleshoot – Fault Code 48 (Loss of Field Sense) <i>Includes:</i> – Check – Control	–	–	0.2	–	–	–

Group 01 – Cylinder Block

Contents	Page
Balancer Shaft and Gear	14
Replace	14
Camshaft	14
Replace	14
Connecting Rod	15
Remove and Install	15
Crankshaft	16
Remove and Install	16
Crankshaft Seal, Rear	17
Replace	17
Cylinder Block	17
Hone or Bore	17
Gear Case Cover	18
Remove and Install	18
Gear Cover Gasket	18
Replace	18
Gear, Camshaft	19
Remove and Install	19
Gear, Crankshaft	20
Remove and Install	20
Governor, Mechanical	20
Remove and Install	20
Piston Assembly	21
Remove and Install	21
Piston Rings	21
Replace	21

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
<p>01-3AD Balancer Shaft and Gear – Replace</p> <p><i>Includes:</i></p> <ul style="list-style-type: none"> – Disconnect and connect – Electrical wiring – Choke/governor linkages – Fuel lines – Drain and refill engine fluids – Remove and install <ul style="list-style-type: none"> – Housings and baffles – Mounting tray and mounts – Exhaust manifold muffler and gaskets – Engine sheet metal – Gear case cover and gasket – Balancer shaft and gear assembly – Tappets/push rods – Clean and visually inspect: <ul style="list-style-type: none"> – Crankshaft – Adjust valve lash – Test run engine 	–	–	2.3	–	–	–
<p>01-3AE Camshaft – Replace</p> <p><i>Includes:</i></p> <ul style="list-style-type: none"> – Disconnect and connect – Electrical wiring – Choke/governor linkage – Fuel lines – Drain and refill engine fluids – Remove and install <ul style="list-style-type: none"> – Housings and baffles – Mounting tray and mounts – Cooling air duct assembly – Exhaust manifold muffler and gaskets – Engine sheet metal <p><i>(continued on next page)</i></p>	–	–	2.5	–	–	–

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
01-3AE Camshaft – Replace <ul style="list-style-type: none"> – Gear case cover and gasket – Valve covers, gaskets and rocker arm assembly – Tappets/push rods – Camshaft assembly – Balancer shaft and gear assembly – Clean and visually inspect: <ul style="list-style-type: none"> – Crankshaft – Adjust valve lash – Test run genset 	–	–	2.5	–	–	–
01-1AA Connecting Rod – Remove and Install <i>Includes:</i> <ul style="list-style-type: none"> – Disconnect and connect – Electrical wiring harnesses – Choke/governor linkages – Fuel lines – Drain and refill engine fluids – Remove and install <ul style="list-style-type: none"> – Housings and baffles – Mounting tray and mounts – Exhaust system and gaskets – Engine sheet metal – Oil pan assembly and gasket – Air cleaner or silencer assembly – Intake manifold, gaskets and carb assembly – Valve covers and gaskets – Cylinder head and gaskets – Connecting rod cap and nuts – Connecting rod and piston assembly – Clean and visually inspect <ul style="list-style-type: none"> – Crankshaft <p><i>(continued on next page)</i></p>	–	–	2.5	–	–	–

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
01-1AA Connecting Rod – Remove and Install – Adjust valve lash – Torque cylinder heads – Test run genset	–	–	2.5	–	–	–
01-112 Crankshaft – Remove and Install <i>Includes:</i> – Disconnect and connect – Wiring harness – Choke/governor linkage – Fuel lines – Drain and refill engine fluids – Remove and install – Mounting tray and mounts – Engine wiring harness – Housings and baffles – Engine sheet metal – Flywheel – End bell assembly and starter – Generator end – Exhaust manifold and gaskets – Air cleaner – Intake manifold, gaskets and carb assembly – Valve cover and gaskets – Cylinder heads and gaskets – Gear case cover – Oil base assembly and gasket – Piston and connecting rod assembly – Crankshaft and gear – Oil seals – Adjust valve lash – Clean and inspect – Cylinder bores – Test run genset	–	–	4.5	–	–	–

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
01-308 Crankshaft Seal, Rear – Replace <i>Includes:</i> <ul style="list-style-type: none"> – Disconnect and connect – Electrical wiring – Governor and choke linkages – Fuel lines – Drain and refill engine fluids – Remove and install <ul style="list-style-type: none"> – Housings and baffles – Mounting tray and mounts – Generator end – Generator adapter – Oil seal – Clean and visually inspect: <ul style="list-style-type: none"> – Crankshaft – Test run genset 	–	–	3.0	–	–	–
01-541 Cylinder Block – Hone or Bore <i>Includes:</i> <ul style="list-style-type: none"> – Disconnect and connect – Choke linkage – Governor linkage – Electrical wiring – Remove and install <ul style="list-style-type: none"> – Housings and baffles – Mounting tray and mounts – Generator end – Intake manifold and gaskets – Exhaust manifold and gaskets – Muffler – Cylinder head – Oil base – Gearcase cover and gasket <p><i>(continued on next page)</i></p>	–	–	8.0	–	–	–

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
		R	A	B	C	D
01-541 Cylinder Block – Hone or Bore <ul style="list-style-type: none"> – Piston and piston rings – Connecting rod – Crankshaft – Camshaft – Balance shaft – Valve assembly – Tappets – Bearings – Oil seals – Hone or bore cylinder – Test run genset 	–	–	8.0	–	–	–
01-121 Gear Case Cover – Remove and Install <i>Includes:</i> <ul style="list-style-type: none"> – Disconnect and connect – Choke linkage – Fuel lines – Electrical wiring – Remove and install – Housings and baffles – Mounting tray and mounts – Muffler and exhaust manifold gasket – Gear case cover and gasket – Test run genset 	–	–	1.5	–	–	–
01-3AB Gear Cover Gasket – Replace <i>Includes:</i> <ul style="list-style-type: none"> – Disconnect and connect – Choke linkage – Fuel lines – Electrical wiring – Remove and install – Housings and baffles <p><i>(continued on next page)</i></p>	–	–	1.5	–	–	–

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
		R	A	B	C	D
01-3AB Gear Cover Gasket – Replace <ul style="list-style-type: none"> – Mounting tray and mounts – Muffler and exhaust manifold gasket – Gear case cover and gasket – Test run genset 	–	–	1.5	–	–	–
01-107 Gear, Camshaft – Remove and Install <i>Includes:</i> <ul style="list-style-type: none"> – Disconnect and connect – Electrical wiring – Choke linkage – Fuel lines – Drain and refill engine fluids – Remove and install <ul style="list-style-type: none"> – Housings and baffles – Mounting tray and mounts – Cooling air duct assembly – Exhaust manifold muffler and gaskets – Engine sheet metal – Gear case cover and gasket – Valve covers, gaskets and rocker arm assembly – Tappets/push rods – Camshaft assembly – Cam gear – Clean and visually inspect: <ul style="list-style-type: none"> – Camshaft – Adjust valve lash – Test run genset 	–	–	2.7	–	–	–

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
01-114 Gear, Crankshaft – Remove and Install <i>Includes:</i> <ul style="list-style-type: none"> – Disconnect and connect – Electrical wiring harnesses – Choke/governor linkages – Fuel lines – Drain and refill engine fluids – Remove and install <ul style="list-style-type: none"> – Housings and baffles – Mounting tray and mounts – Exhaust system and gaskets – Engine sheet metal – Gearcase cover and gasket – Crankshaft gear – Clean and visually inspect: <ul style="list-style-type: none"> – Crankshaft – Test run genset 	–	–	2.0	–	–	–
01-1AB Governor, Mechanical – Remove and Install <i>Includes:</i> <ul style="list-style-type: none"> – Disconnect and connect – Choke/governor linkages – Fuel lines – Electrical wiring – Remove and install <ul style="list-style-type: none"> – Housings and baffles – Mounting tray and mounts – Muffler – Governor gear assembly – Gearcase cover and gaskets – Test run genset 	–	–	2.0	–	–	–

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
01-140 Piston Assembly – Remove and Install <i>Includes:</i> <ul style="list-style-type: none"> – Disconnect and connect – Electrical wiring – Governor and choke linkages – Fuel lines – Drain and refill engine fluids – Remove and install <ul style="list-style-type: none"> – Housings and baffles – Mounting tray and mounts – Exhaust system and gaskets – Engine sheet metal – Oil pan assembly and gasket – Air cleaner or silencer assembly – Intake manifold, gaskets and carb assembly – Valve cover and gaskets – Cylinder head and gaskets – Piston and connecting rod assembly – Clean and visually inspect: <ul style="list-style-type: none"> – Crankshaft – Adjust valve lash – Torque cylinder head – Test run genset 	–	–	2.5	–	–	–
01-3AC Piston Rings – Replace <i>Includes:</i> <ul style="list-style-type: none"> – Disconnect and connect – Electrical wiring – Governor and choke linkages – Fuel lines – Drain and refill engine fluids – Remove and install <ul style="list-style-type: none"> – Housings and baffles <p><i>(continued on next page)</i></p>	–	–	2.5	–	–	–

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
01-3AC Piston Rings – Replace <ul style="list-style-type: none"> – Mounting tray and mounts – Exhaust manifold, muffler and gaskets – Engine sheet metal – Oil pan assembly and gasket – Air cleaner or silencer assembly – Intake manifold, gaskets and carb assembly – Valve covers, gaskets – Cylinder heads and gaskets – Piston and connecting rod assembly – Clean and visually inspect: <ul style="list-style-type: none"> – Crankshaft – Adjust valve lash – Test run genset 	–	–	2.5	–	–	–

Group 02 – Cylinder Head

Contents	Page
Cylinder Head	24
Remove and Install	24
Cylinder Head Gasket	24
Replace	24
Valves	25
Grind	25

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
02-104 Cylinder Head – Remove and Install <i>Includes:</i> <ul style="list-style-type: none"> – Disconnect and connect – Governor and carb linkages – Fuel lines – Drain and refill engine fluids – Remove and install <ul style="list-style-type: none"> – Housings and baffles – Exhaust system & gasket – Engine sheet metal – Air cleaner or silencer assembly – Intake manifold, gaskets and carb assembly – Valve cover and gasket – Cylinder head and head gasket – Scrape carbon from <ul style="list-style-type: none"> – Cylinder head – Top of piston – Around valves and ports – Adjust valve lash – Torque head bolts to spec – Test run genset 	–	–	1.7	–	–	–
02-3AA Cylinder Head Gasket – Replace <i>Includes:</i> <ul style="list-style-type: none"> – Disconnect and connect – Governor and carb linkages – Fuel lines – Drain and refill engine fluids – Remove and install <ul style="list-style-type: none"> – Housings and baffles – Exhaust system and gasket – Engine sheet metal – Air cleaner or silencer assembly <p><i>(continued on next page)</i></p>	–	–	1.8	–	–	–

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
02-3AA Cylinder Head Gasket – Replace <ul style="list-style-type: none"> – Intake manifold, gaskets and carb assembly – Valve cover and gasket – Cylinder head and head gasket – Scrape carbon from <ul style="list-style-type: none"> – Cylinder head – Top of piston – Around valves and ports – Adjust valve lash – Torque head bolts to spec – Test run genset 	–	–	1.8	–	–	–
02-513 Valves – Grind <i>Includes:</i> <ul style="list-style-type: none"> – Disconnect and connect – Governor & carb linkages – Fuel lines – Drain and refill engine fluids – Remove and install <ul style="list-style-type: none"> – Housings and baffles – Exhaust system and gasket – Engine sheet metal – Air cleaner or silencer assembly – Intake manifold, gaskets and carb assembly – Valve cover and gasket – Cylinder heads and head gasket – Rocker arm and push tubes – Valve keepers and springs – Intake/exhaust valves – Scrape carbon from <ul style="list-style-type: none"> – Cylinder head – Top of piston – Around valves and ports <p><i>(continued on next page)</i></p>	–	–	2.0	–	–	–

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
02-513 Valves – Grind <ul style="list-style-type: none"> – Refinish valve seats and valve face – Adjust valve lash – Torque head bolts to spec – Test run genset 	–	–	2.0	–	–	–

Group 03 – Rocker Levers

Contents	Page
Breather Valve	28
Remove and Install	28
Valves	28
Adjust, All	28

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
03-801 Breather Valve – Remove and Install <i>Includes:</i> <ul style="list-style-type: none"> – Remove and Install – Housing service door – Valve cover & gasket – Breather valve – Visually inspect – Rocker arms – Valve spring – Push tubes – Test run genset 	–	–	0.4	–	–	–
03-603 Valves – Adjust, All <i>Includes:</i> <ul style="list-style-type: none"> – Remove and Install – Valve cover and gasket – Adjust valve lash – Test run genset 	–	–	0.5	–	–	–

Group 04 – Cam Follower

Contents	Page
Valve Tappets	30
Remove and Install	30

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
<p>04-118 Valve Tappets – Remove and Install</p> <p><i>Includes:</i></p> <ul style="list-style-type: none"> - Disconnect and connect - Governor and carb linkages - Fuel lines - Drain and refill engine fluids - Remove and install <ul style="list-style-type: none"> - Housings and baffles - Exhaust system and gasket - Engine sheet metal - Air cleaner or silencer assembly - Intake manifold, gaskets and carb assembly - Valve cover and gasket - Push tubes - Cylinder heads and head gasket - Gear case cover and gasket - Valve tappets - Scrape carbon from <ul style="list-style-type: none"> - Cylinder head - Top of piston - Around valves and ports - Adjust valve lash - Torque head bolts to spec - Test run genset 	-	-	2.8	-	-	-

Group 05 – Fuel System

Contents	Page
Carburetor	32
Adjust	32
Rebuild	32
Remove and Install	32
Choke, Bi-Metal	33
Replace	33
Choke, Carburetor	33
Replace	33
Fuel Pump, Electric	34
Remove and Install	34
Governor, Mechanical	34
Adjust	34
Fuel Shutoff Valve (Gasoline)	35
Remove and Install	35
LP Fuel Supply Valve	35
Remove and Install	35
LP Primer Solenoid Assembly	35
Remove and Install	35
LP Regulator Assembly	36
Remove and Install	36

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
		R	A	B	C	D
05-6AA Carburetor – Adjust <i>Includes:</i> <ul style="list-style-type: none"> – Adjust – Throttle stop – Main jet – Idle jet – (Starting 1995 C.A.R.B. certified engines are tamper proof) – Test run genset 	–	–	0.3	–	–	–
05-214 Carburetor – Rebuild <i>Includes:</i> <ul style="list-style-type: none"> – Remove and install – Air cleaner assembly – Intake manifold – Carburetor – Clean and visually inspect – Carburetor – Install replacement parts as needed – Adjust – Throttle stop – Main jet – Idle jet – (Starting 1995 C.A.R.B. certified engines are tamper proof) – Test run genset 	–	–	1.4	–	–	–
05-118 Carburetor – Remove and Install <i>Includes:</i> <ul style="list-style-type: none"> – Disconnect and connect: – Battery leads – Fuel shutoff leads – Fuel lines <p><i>(continued on next page)</i></p>	–	–	1.2	–	–	–

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
05-118 Carburetor – Remove and Install – Remove and install – Housings and baffles – Air cleaner and housing assembly – Carburetor body mounting bolts – Choke/governor linkages – Carburetor and gasket – Fuel shutoff valve – Adjust – Throttle stop and linkages as required – Test run genset	–	–	1.2	–	–	–
05-3AB Choke, Bi-Metal – Replace <i>Includes:</i> – Disconnect and connect – Battery leads – Choke linkage – Remove and install – Housings and baffles – Choke retainer cover – Choke cover – Choke thermostat element – Adjust – Choke linkages as required – Test run genset	–	–	0.6	–	–	–
05-3AA Choke, Carburetor – Replace <i>Includes:</i> – Disconnect and connect – Battery leads – Choke linkage – Remove and install – Housings and baffles – Choke retainer cover <i>(continued on next page)</i>	–	–	0.5	–	–	–

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
05-3AA Choke, Carburetor – Replace – Choke cover – Choke thermostat element – Adjust: – Choke linkages as required – Test run genset	–	–	0.5	–	–	–
05-1AC Fuel Pump, Electric – Remove and Install <i>Includes:</i> – Disconnect and connect – Fuel lines – Pump electric leads – Remove and install – Service door – Control mounting screws and control – Set ground terminal – Start solenoid – Fuel filter – Fuel pump – Check – Fuel lines for leaks – Test run genset	–	–	0.5	–	–	–
05-6AB Governor, Mechanical – Adjust <i>Includes:</i> – Remove and install – Housing service door – Adjust – Idle speed on carburetor – Choke – Governor speed adjustment screw – Test run genset	–	–	0.2	–	–	–

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
05-1AH Fuel Shutoff Valve (Gasoline) – Remove and Install <i>Includes:</i> <ul style="list-style-type: none"> – Disconnect and connect – Battery leads – Fuel shutoff leads – Remove and install – Housings and baffles – Fuel shutoff valve – Adjust – Throttle stop and linkages as required – Test run genset 	–	–	0.3	–	–	–
05-136 LP Fuel Supply Valve – Remove and Install <i>Includes:</i> <ul style="list-style-type: none"> – Disconnect and connect – Battery leads – Fuel lines – Fuel shutoff leads – Remove and install – Housings and baffles – Control assembly – Fuel shutoff valve – Adjust – Throttle stop and linkages as required – Test run genset 	–	–	0.5	–	–	–
05-135 LP Primer Solenoid Assembly (KY All Specs, KYD Spec A Only) – Remove and Install <i>Includes:</i> <ul style="list-style-type: none"> – Disconnect and connect – Battery leads – Fuel lines – Primer solenoid leads <p><i>(continued on next page)</i></p>	–	–	0.7	–	–	–

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
05-135 LP Primer Solenoid Assembly (KY All Specs, KYD Spec A Only) – Remove and Install – Remove and install – Housings and baffles – Regulator assembly – Primer solenoid – Adjust – Solenoid as needed – Test run genset	–	–	0.7	–	–	–
05-169 LP Regulator Assembly – Remove and Install <i>Includes:</i> – Disconnect and connect – Battery leads – Fuel lines – Primer solenoid leads – Remove and install – Housings and baffles – Regulator assembly – Test run genset	–	–	0.5	–	–	–

Group 07 – Lubricating Oil System

Contents	Page
Oil Base	38
Remove and Install	38
Oil Base Gasket	38
Remove and Install	38

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
<p>07-109 Oil Base – Remove and Install <i>Includes:</i></p> <ul style="list-style-type: none"> – Disconnect and connect – Wiring harnesses – Fuel lines – Drain and refill engine fluids – Remove and install – Housings and baffles – Mounting tray and mounts – Exhaust manifold – Oil pan assembly – Check for oil leaks – Test run genset 	–	–	1.5	–	–	–
<p>07-3AA Oil Base Gasket – Remove and Install <i>Includes:</i></p> <ul style="list-style-type: none"> – Disconnect and connect – Wiring harnesses – Fuel lines – Drain and refill engine fluids – Remove and install – Housings and baffles – Mounting tray and mounts – Exhaust manifold and gaskets – Oil pan assembly and gasket – Check for oil leaks – Test run genset 	–	–	1.6	–	–	–

Group 10 – Intake Air System

Contents	Page
Air Cleaner Element	40
Replace	40
Intake Manifold	40
Remove and Install	40
Intake Manifold Gasket	40
Remove and Install	40

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
10-301 Air Cleaner Element – Replace <i>Includes:</i> <ul style="list-style-type: none"> – Remove and install – Sound shield service door – Air cleaner cover and hardware – Filter element – Test run genset 	–	–	0.2	–	–	–
10-129 Intake Manifold – Remove and Install <i>Includes:</i> <ul style="list-style-type: none"> – Disconnect and connect – Choke and governor linkages – Fuel lines – Remove and install – Housings and baffles – Air cleaner assembly – Carburetor and gaskets – Manifold insulators and gaskets – Intake manifold – Test run genset 	–	–	1.3	–	–	–
10-3AA Intake Manifold Gasket – Remove and Install <i>Includes:</i> <ul style="list-style-type: none"> – Disconnect and connect – Choke and governor linkages – Fuel lines – Remove and install – Housings and baffles – Air cleaner assembly – Carburetor and gaskets – Manifold insulators and gaskets – Intake manifold and gaskets – Test run genset 	–	–	1.3	–	–	–

Group 11 – Exhaust System

Contents	Page
Exhaust Manifold	42
Remove and Install	42
Exhaust Manifold Gaskets	42
Remove and Install	42

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
11-3AA Exhaust Manifold – Remove and Install <i>Includes:</i> <ul style="list-style-type: none"> – Remove and install – Housings and baffles – Exhaust manifold – Test run genset and check for leaks 	–	–	0.5	–	–	–
11-304 Exhaust Manifold Gaskets – Remove and Install <i>Includes:</i> <ul style="list-style-type: none"> – Remove and install – Housings and baffles – Exhaust manifold and gaskets – Test run genset and check for leaks 	–	–	0.5	–	–	–

Group 13 – Electrical Equipment

Contents	Page
Ignition Coil	44
Remove and Install	44
Magneto, Ignition	44
Remove and Install	44
Magneto, Ignition and Spark Plug Wire	45
Remove and Install	45
Spark Plug	45
Remove and Install	45
Spark Plug Terminal & Boot	45
Remove and Install	45
Starter Motor	46
Remove and Install	46

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
13-116 Ignition Coil (KY Spec A thru H) – Remove and Install <i>Includes:</i> <ul style="list-style-type: none"> – Disconnect and connect – Electrical wiring – Remove and install – Ignition coil – Test run genset 	–	–	0.7	–	–	–
13-1AB Magneto, Ignition (KY Spec A thru I) – Remove and Install <i>Includes:</i> <ul style="list-style-type: none"> – Remove and install – Top cover mounting screws – Top cover – Inlet insulation baffle – Inlet baffle mounting bolts – Lead to starter – Scroll assembly mounting screws – Scroll assembly – Rotor thru bolt – Fan hub – End bell assembly mounting screws – End bell assembly – Magneto mounting screws – Magneto – Disconnect and connect – Electrical leads – Test run genset 	–	–	2.2	–	–	–

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
13-1AC Magneto, Ignition and Spark Plug Wire (KY Begin Spec J, KYD All Specs) – Remove and Install <i>Includes:</i> <ul style="list-style-type: none"> – Disconnect and connect – Fuel line – Wiring harnesses as required – Remove and install – Housing and baffles – Control – Air filter assembly – Ground strap to end bell assembly – Air housing assembly – Magneto and spark plug wire – Reset magneto gap – Test run genset 	–	–	0.5	–	–	–
13-109 Spark Plug – Remove and Install <i>Includes:</i> <ul style="list-style-type: none"> – Disconnect and connect – Spark plug lead – Remove and replace spark plug – Test run genset 	–	–	0.2	–	–	–
13-119 Spark Plug Terminal & Boot (KY Begin Spec J, KYD All Specs) – Remove and Install <i>Includes:</i> <ul style="list-style-type: none"> – Disconnect and connect – Spark plug lead – Cut & trim – Spark plug lead – Install boot and crimp terminal – Test run genset 	–	–	0.2	–	–	–

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
13-104 Starter Motor – Remove and Install <i>Includes:</i> <ul style="list-style-type: none"> – Disconnect and connect – Starter wiring harness leads – Remove and install – Housings and baffles – Starter mounting bolts & bracket – Starter – Test run genset 	–	–	1.0	–	–	–

Group 16 – Mounting Adaptations

Contents	Page
Flywheel	48
Remove and Install	48
Air Housing Assembly	48
Remove and Install	48

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
16-103 Flywheel – Remove and Install <i>Includes:</i> <ul style="list-style-type: none"> – Disconnect and connect – Wiring harnesses – Fuel lines – Remove and install – Housing and baffles – Generator end mounting bolts – Control – Ground strap to end bell – Air filter covers & filter – Air duct assembly – Scroll assembly – Rotor thru bolt – Flywheel/fan assembly – Test run genset 	–	–	1.5	–	–	–
16-1AD Air Housing Assembly – Remove and Install <i>Includes:</i> <ul style="list-style-type: none"> – Remove and install – Housings & baffles – Air cleaner assembly – Generator mounting bolts – Control assembly – Ground strap to end bell assembly – Air housing assembly – Air seal – Test run genset 	–	–	0.4	–	–	–

Group 17 – Miscellaneous

Contents	Page
Drip Pan	50
Remove and Install	50
Exhaust Tube	50
Remove and Install	50
Muffler	50
Remove and Install, KYD	50
Remove and Install, KY	51

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
17-1AL Drip Pan – Remove and Install <i>Includes:</i> <ul style="list-style-type: none"> – Disconnect and connect: <ul style="list-style-type: none"> – Ground leads – AC wiring harness – Fuel lines – Remove and install <ul style="list-style-type: none"> – Engine and generator mounting bolts – Housings and baffles – Control assembly – Start solenoid – Muffler 	–	–	0.7	–	–	–
17-1AA Exhaust Tube – Remove and Install <i>Includes:</i> <ul style="list-style-type: none"> – Remove and install <ul style="list-style-type: none"> – Housings and baffles – Exhaust tube – Gaskets – Check for exhaust leaks – Test run genset 	–	–	0.5	–	–	–
17-131-01 Muffler – Remove and Install, KYD <i>Includes:</i> <ul style="list-style-type: none"> – Remove and Install <ul style="list-style-type: none"> – Muffler clamp – Muffler mounting screw – Check for exhaust leaks – Test run genset 	–	–	0.3	–	–	–

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
<p>(continued from previous page) 17-131-02 Muffler – Remove and Install, KY <i>Includes:</i></p> <ul style="list-style-type: none"> – Remove and Install – Housing and baffles – Exhaust manifold and gaskets – Muffler – Check for exhaust leaks – Test run genset 	–	–	0.9	–	–	–

Group 25 – Generator

Contents	Page
Brush Block and Brushes	54
Replace	54
Main Rotor	54
Remove and Install	54
Main Stator	55
Remove and Install	55
Rotor Bearing	55
Replace	55

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
25-3AA Brush Block and Brushes – Replace <i>Includes:</i> <ul style="list-style-type: none"> – Disconnect and connect – Wiring harnesses – Fuel lines – Remove and install – Housing and baffles – Generator mounting hardware – Control – Ground strap to end bell – Air duct assembly – Fan assembly – Rotor thru bolt – Brush block assembly and wiring – Test run genset 	–	–	1.7	–	–	–
25-1AA Main Rotor – Remove and Install <i>Includes:</i> <ul style="list-style-type: none"> – Disconnect and connect – Wiring harnesses – Fuel lines – Remove and install – Housing and baffles – Generator mounting hardware – Control – Ground strap to end bell – Air duct assembly – Fan assembly – Ignition magneto – End bell assembly – Brush block assembly and wiring – Rotor thru bolt & rotor assembly – Test run genset 	–	–	2.5	–	–	–

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
<p>25-1AB Main Stator – Remove and Install</p> <p><i>Includes:</i></p> <ul style="list-style-type: none"> – Disconnect and connect – Wiring harnesses – Fuel lines – Remove and install – Housing and baffles – Generator mounting hardware – Control – Ground strap to end bell – Air duct assembly – Fan assembly – Ignition magneto – End bell assembly – Brush block assembly and wiring – Rotor thru bolt and rotor assembly – Stator harness connector and stator assembly – Test run genset 	–	–	2.8	–	–	–
<p>25-3AC Rotor Bearing – Replace</p> <p><i>Includes:</i></p> <ul style="list-style-type: none"> – Disconnect and connect – Wiring harnesses – Fuel lines – Remove and install – Housing and baffles – Generator mounting hardware – Control – Ground strap to end bell – Air duct assembly – Fan assembly – Ignition magneto – End bell assembly <p><i>(continued on next page)</i></p>	–	–	2.7	–	–	–

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
25-3AC Rotor Bearing – Replace <ul style="list-style-type: none"> – Brush block assembly and wiring – Rotor thru bolt and rotor assembly – Rotor bearing – Test run genset 	–	–	2.7	–	–	–

Group 26 – Generator Control

Contents	Page
AC Circuit Breaker	58
Replace	58
AC Voltage Regulator	58
Replace Board	58
Fuse Holder	58
Replace	58
PCB Control Board	59
Replace	59
Relay, Start Disconnect (K2)	59
Replace	59
Resistor, Charging	59
Replace	59
Start Solenoid	60
Replace	60
Stop Solenoid	60
Replace	60
Voltage Transformer	60
Remove and Install	60
DC Wiring Harness	61
Remove and Install	61
AC Wiring Harness	61
Remove and Install	61

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
26-3AE AC Circuit Breaker – Replace <i>Includes:</i> <ul style="list-style-type: none"> – Disconnect and connect – Battery cables – Load and line leads to circuit breaker – Remove and install – Control box cover and mounting screws – Circuit breaker mounting screws and circuit breaker – Test run genset 	–	–	0.2	–	–	–
26-3AA AC Voltage Regulator (KY Spec A-I) – Replace Board <i>Includes:</i> <ul style="list-style-type: none"> – Disconnect and connect – Electrical harness to regulator – Remove and install – Service door – Regulator/control mounting screw – Regulator – Test run genset 	–	–	0.2	–	–	–
26-3AI Fuse Holder – Replace <i>Includes:</i> <ul style="list-style-type: none"> – Remove and install – Service door – Control mounting screws – Leads to fuse holder – Fuse holder mounting nut – Test run genset 	–	–	0.2	–	–	–

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
26-3AB PCB Control Board (KY Spec J, KYD All Specs) – Replace <i>Includes:</i> <ul style="list-style-type: none"> – Disconnect and connect – Battery cables – Unplug remote and control harness – Control harness – Remove and install – Housing service door – Control assembly mounting screws – Start solenoid mounting screws – Control board assembly – Test run genset 	–	–	0.8	–	–	–
26-3AG Relay, Start Disconnect (K2) (KY Spec A-I) – Replace <i>Includes:</i> <ul style="list-style-type: none"> – Remove and install – Service door – Control assembly mounting screws – Relay mounting screws – Relay – Disconnect and connect – Electrical wiring – Test run genset 	–	–	0.2	–	–	–
26-3AH Resistor, Charging (KY Spec A-I) – Replace <i>Includes:</i> <ul style="list-style-type: none"> – Remove and install – Top cover mounting screws – Top cover – Resistor mounting screws – Disconnect and connect – Wires to resistor – Test run genset 	–	–	0.3	–	–	–

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
		R	A	B	C	D
26-3AC Start Solenoid – Replace <i>Includes:</i> <ul style="list-style-type: none"> – Disconnect and connect – Battery cables – Remove and install – Housing service door – Control assembly mounting screws – Control board assembly – Starter solenoid and associated wiring – Test run genset 	–	–	0.5	–	–	–
26-3AF Stop Solenoid (KY Spec A only) – Replace <i>Includes:</i> <ul style="list-style-type: none"> – Remove and install – Top cover mounting screws – Top cover – Inlet insulation baffle – Stop solenoid mounting screws – Stop solenoid – Disconnect and connect – Electrical leads – Test run genset for proper operation 	–	–	0.4	–	–	–
26-3AS Voltage Transformer – Remove and Install <i>Includes:</i> <ul style="list-style-type: none"> – Disconnect and connect – Battery leads – Transformer leads – Remove and install – Housings and baffles – Transformer – Test run genset 	–	–	0.3	–	–	–

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
26-1AB DC Wiring Harness – Remove and Install <i>Includes:</i> <ul style="list-style-type: none"> – Disconnect and connect – Sound shield assembly – Battery leads – Starter leads – Fuel pump leads – Leads to PCB assembly – Test run genset 	–	–	1.0	–	–	–
26-1AD AC Wiring Harness – Remove and Install <i>Includes:</i> <ul style="list-style-type: none"> – Disconnect and connect – Sound shield assembly – Battery leads – AC control box mounting screws, cover and control – AC leads to circuit breaker – Ground terminal connections – AC wiring harness – Test run genset 	–	–	0.5	–	–	–

Index

A

AC Circuit Breaker, Replace, 58
Ac Voltage Regulator, Replace, 58
AC Wiring Harness, Remove and Install, 61
Administrative Time, Open/Close Repair Order (Shop), 2
Air Cleaner Element, Replace, 40
Air Housing Assy., Remove and Install, 48

B

Balancer Shaft and Gear, Replace, 14
Breather Valve, Remove and Install, 28
Brush Block and Brushes, Replace, 54

C

Camshaft, Replace, 14
Carburetor
 Adjust, 32
 Rebuild, 32
 Remove and Install, 32
Choke, Bi-Metal, Replace, 33
Choke, Carburetor, Replace, 33
Connecting Rod, Remove and Install, 15
Crankshaft, Remove and Install, 16
Crankshaft Seal, Rear, Replace, 17
Cylinder Block, Hone or Bore, 17
Cylinder Head, Remove and Install, 24
Cylinder Head Gasket, Replace, 24

D

DC Wiring Harness, Remove and Install, 61
Drip Pan, Remove and Install, 50

E

Engine
 Rebuild (Gas Engine), 3
 Remove and Install, 2
Exhaust Manifold, Remove And Install, 42
Exhaust Manifold Gaskets, Remove and Install, 42
Exhaust Tube, Remove and Install, 50

F

Flywheel, Remove and Install, 48
Fuel Pump, Electric, Remove and Install, 34
Fuel Supply Valve, LP, Remove and Install, 35
Fuse Holder, Replace, 58

G

Gear Case Cover, Remove and Install, 18
Gear Cover Gasket, Replace, 18
Gear, Camshaft, Remove and Install, 19
Gear, Crankshaft, Remove and Install, 20
Generator Set, Mobile, Remove and Install, 4
Governor, Mechanical
 Adjust, 34
 Remove and Install, 20

I

Ignition Coil, Remove And Install, 44
Intake Manifold, Remove and Install, 40
Intake Manifold Gasket, Remove and Install, 40

M

- Magneto, Ignition – Begin Spec J, Remove and Install, 45
- Magneto, Ignition, Remove and Install, 44
- Main Rotor, Remove and Install, 54
- Main Stator, Remove and Install, 55
- Muffler, Remove and Install
 - KY, 51
 - KYD, 50

O

- Oil Base, Remove and Install , 38
- Oil Base Gasket, Remove and Install, 38

P

- PCB Control Board, Replace, 59
- Piston, Remove and Install, 21
- Piston Rings, Replace, 21
- Primer Solenoid Assembly, LP, Remove and Install, 35

R

- Regulator Assembly, LP, Remove and Install, 36
- Relay, Start Disconnect (K2), Replace, 59
- Resistor, Charging, Replace, 59
- Rotor Bearing, Replace, 55

S

- Shutoff Valve, Fuel, Remove and Install, 35
- Spark Plug, Remove And Install, 45

- Spark Plug Terminal & Boot, Remove and Install, 45

- Start Solenoid, Replace, 60
- Starter Motor, Remove and Install, 46
- Stop Solenoid, Replace, 60

T

- Troubleshoot
 - Engine Cranks but will not Start, 4
 - Engine Oil Leak, 4
 - Engine Overfueling (Genset), 5
 - Engine Unstable (Hunts) (Genset), 6
 - Engine Will Not Crank (Genset), 6
 - Fault Code 12 – Over Voltage, 8
 - Fault Code 13 – Under Voltage, 8
 - Fault Code 14 – Over Frequency, 8
 - Fault Code 15 – Under Frequency, 8
 - Fault Code 27 – Loss of AC Sense, 8
 - Fault Code 29 – High Battery Voltage, 9
 - Fault Code 32 – Starter Fault, 9
 - Fault Code 35 – Checksum Fault, 9
 - Fault Code 36 – Engine Stopped, 10
 - Fault Code 38 – Field Overload, 10
 - Fault Code 42 – Processor Fault–ROM, 10
 - Fault Code 43 – Processor Fault–RAM, 10
 - Fault Code 45 – Zero Cross Sense Loss, 10
 - Fault Code 46 – Overcrank, 11
 - Fault Code 48 – Loss of Field Sense, 11
 - High/Low AC Output (Genset), 7
 - No AC Output (Genset), 7
 - Starts but Stops when Switch is Released, 5

V

- Valve Tappets, Remove and Install, 30
- Valves
 - Adjust, All, 28
 - Grind, 25
- Voltage Transformer, Remove and Install, 60

Request for SRT Review

Distributor/Dealer Data		
Distributor/Dealer	Phone No.	
Address		
City	State	Zip Code
Country		

My experience has indicated the following repair procedures require more time:

Procedure Data			
SRT Number	Procedure Discription	Published time Hrs.	Suggested time Hrs.
Total Hours			

Generator Set Model
Transfer Switch Model
Repair Date
Technician Name

Describe how repair was performed:

Signature _____ Title _____

Mail to: **Onan Corporation**
Service Department
1400 73rd Avenue NE
Minneapolis, MN 55432



Onan

Cummins Power Generation
1400 73rd Avenue N.E.
Minneapolis, MN 55432
763-574-5000
Fax: 763-528-7229

Cummins and Onan are registered trademarks of Cummins Inc.



Redistribution or publication of this document
by any means, is strictly prohibited.